
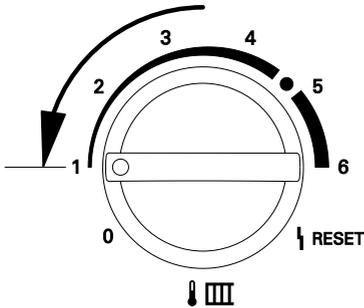


Further details regarding the individual steps (cont.)

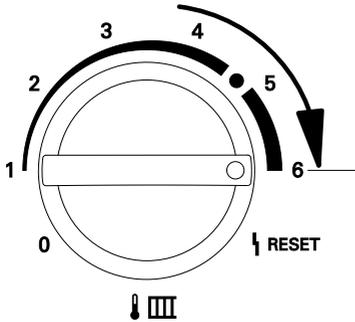

4. Adjust the upper output:
Turn rotary selector "↓ IIII" to the control range on the right.
The display shows 5 bars for upper output.
5. Measure the CO₂ content for upper output.
The CO₂ content must be between 7.4 and 10.5 %.
6. Adjust the lower output:
Turn rotary selector "↓ IIII" to the left control range.
The display shows 1 bar for lower output.
7. Test the CO₂ content for lower output.
The CO₂ content must be between 7.4 and 10.5 %.
8. If the CO₂ content is **not** within the given range, check the flue gas/ventilation air system for tightness.
Remedy any leaks.
9. Shut the boiler down, remove flue gas analyser and close flue gas port (A).