


## Further details regarding the individual steps (cont.)

### Burner removal

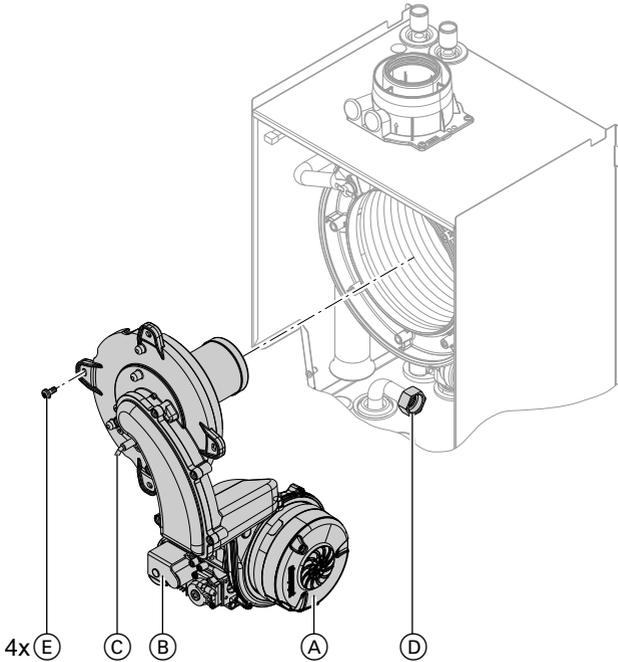

1. Switch OFF the power.
2. Shut off the gas supply.
3. Disconnect electrical cables from fan motor (A), gas valve (B).
4. Open control unit casing (see page 11) and pull out the lead to ignition electrode (C).
5. Disconnect the venturi extension from fan (A).
6. Disconnect gas supply pipe (D) fitting.
7. Undo four screws (E) and remove the burner.



#### Please note

To prevent damage, never rest the burner on the gauze assembly.