

Installation Guide

MB10 Pivot Bath Screen

IMPORTANT


Please read the complete instructions
before commencing fitting.

Do Not attempt to install the product unless you can tick all 4 boxes satisfactorily


- Check that you have the tools required
- Check the installation site is compatible with the sizes of door supplied
- Check all the enclosure components are present
- Check the installation kit is complete

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or 'stud partition' walls will require alternative fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.

**ATTENTION: TAKE EXTREME CARE WHEN HANDLING GLASS.
WEAR PROTECTIVE EYEWEAR AND CLOTHING.
DO NOT LEAVE THE GLASS ON HARD SURFACES AND AVOID
CONTACT BETWEEN THE GLASS EDGES AND HARD SURFACES OR
IMPACTS DURING THE INSTALLATION**

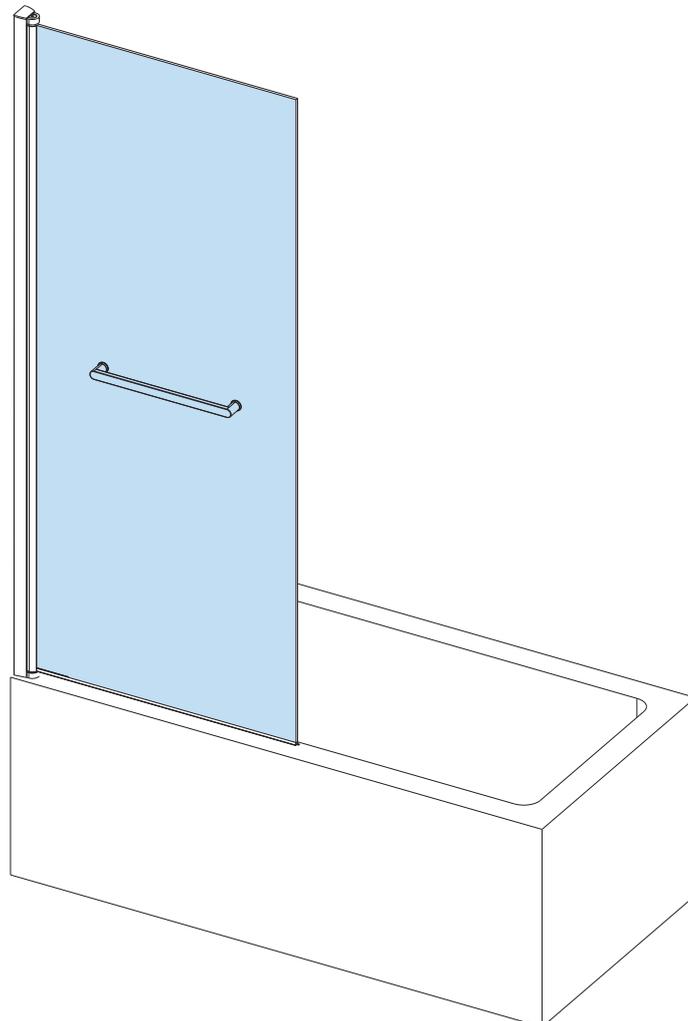


COMPONENTS AND BOX CONTENTS

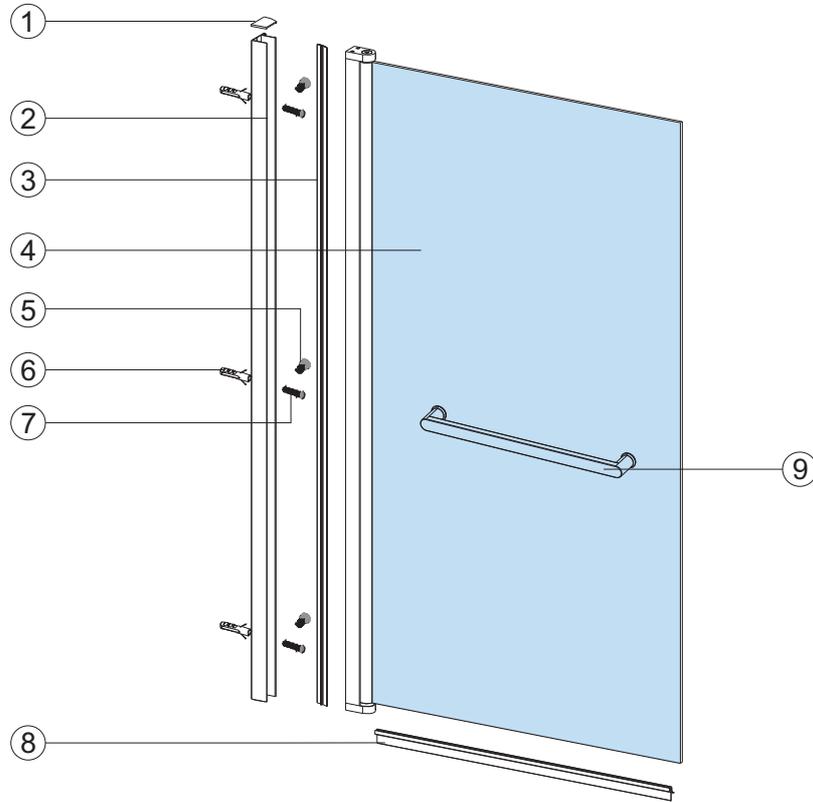

No.	Description	QTY	Part No.	No.	Description	QTY	Part No.
1	Cover cap for wall profile L/R	2	SP0M7017L / SP0M7017R	6	Wall plug	3	SP0B08070
2	Wall profile	1	SP0M7013	7	Screw ST4x40	3	A2403001
3	Cover strip	1	SP0M7004	8	Bottom seal	1	SP0M7030
4	Moving panel	1	A	9	Handle	1	SP0M7033
5	Screw ST4x12	3	A2401201				

FIXING KIT COMPONENTS, TOOLS REQUIRED, SITE

Fixing Kit components
parts shown are not to scale

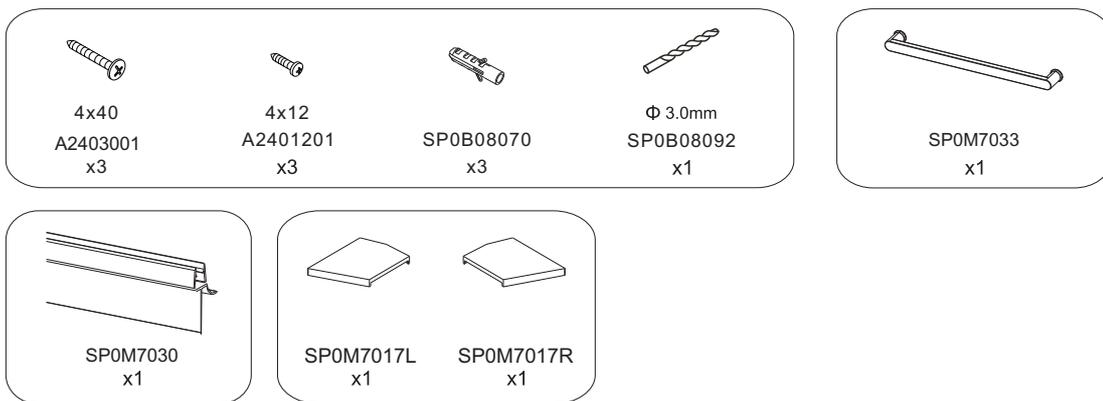

Tools Required

- 6mm masonry drill bit
- Spanner
- Power drill
- Quality Silicone
- Pencil
- Tape Measure
- #2 Philips Head screw driver
- Spirit level with horizontal and vertical level indicators

IMPORTANT - Installation site

1. Ensure your bath is level before fitting. This screen is not designed to fit on baths with stepped fronts, roll top rims or integral soap dishes.
2. The tiling or other wall finishing should be effectively sealed at the tray edges.

INSTALLATION

1. Position the wall profile so the seal on the moving panel sits on the inside edge of the bath. **FIG 1.**


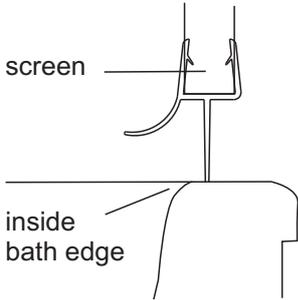


FIG 1

2. Plumb the wall profiles using the vertical element of the spirit level. Mark 3 holes, drill with 6mm masonry bit and fit wall plugs. Using the 3 screw fix wall profile to wall. **FIG 2.**

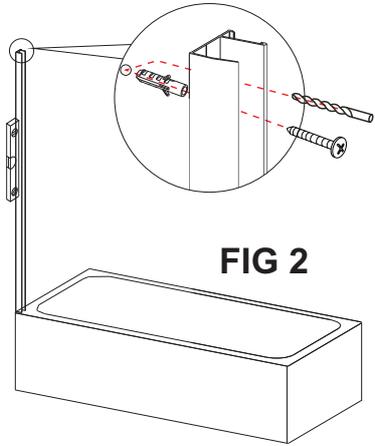

3. Ensure rising butt (**FIG 3/C**) is to the bottom, if not reverse by loosening screws as in A. Swing screen around and tighten screws as in **FIG 3.**

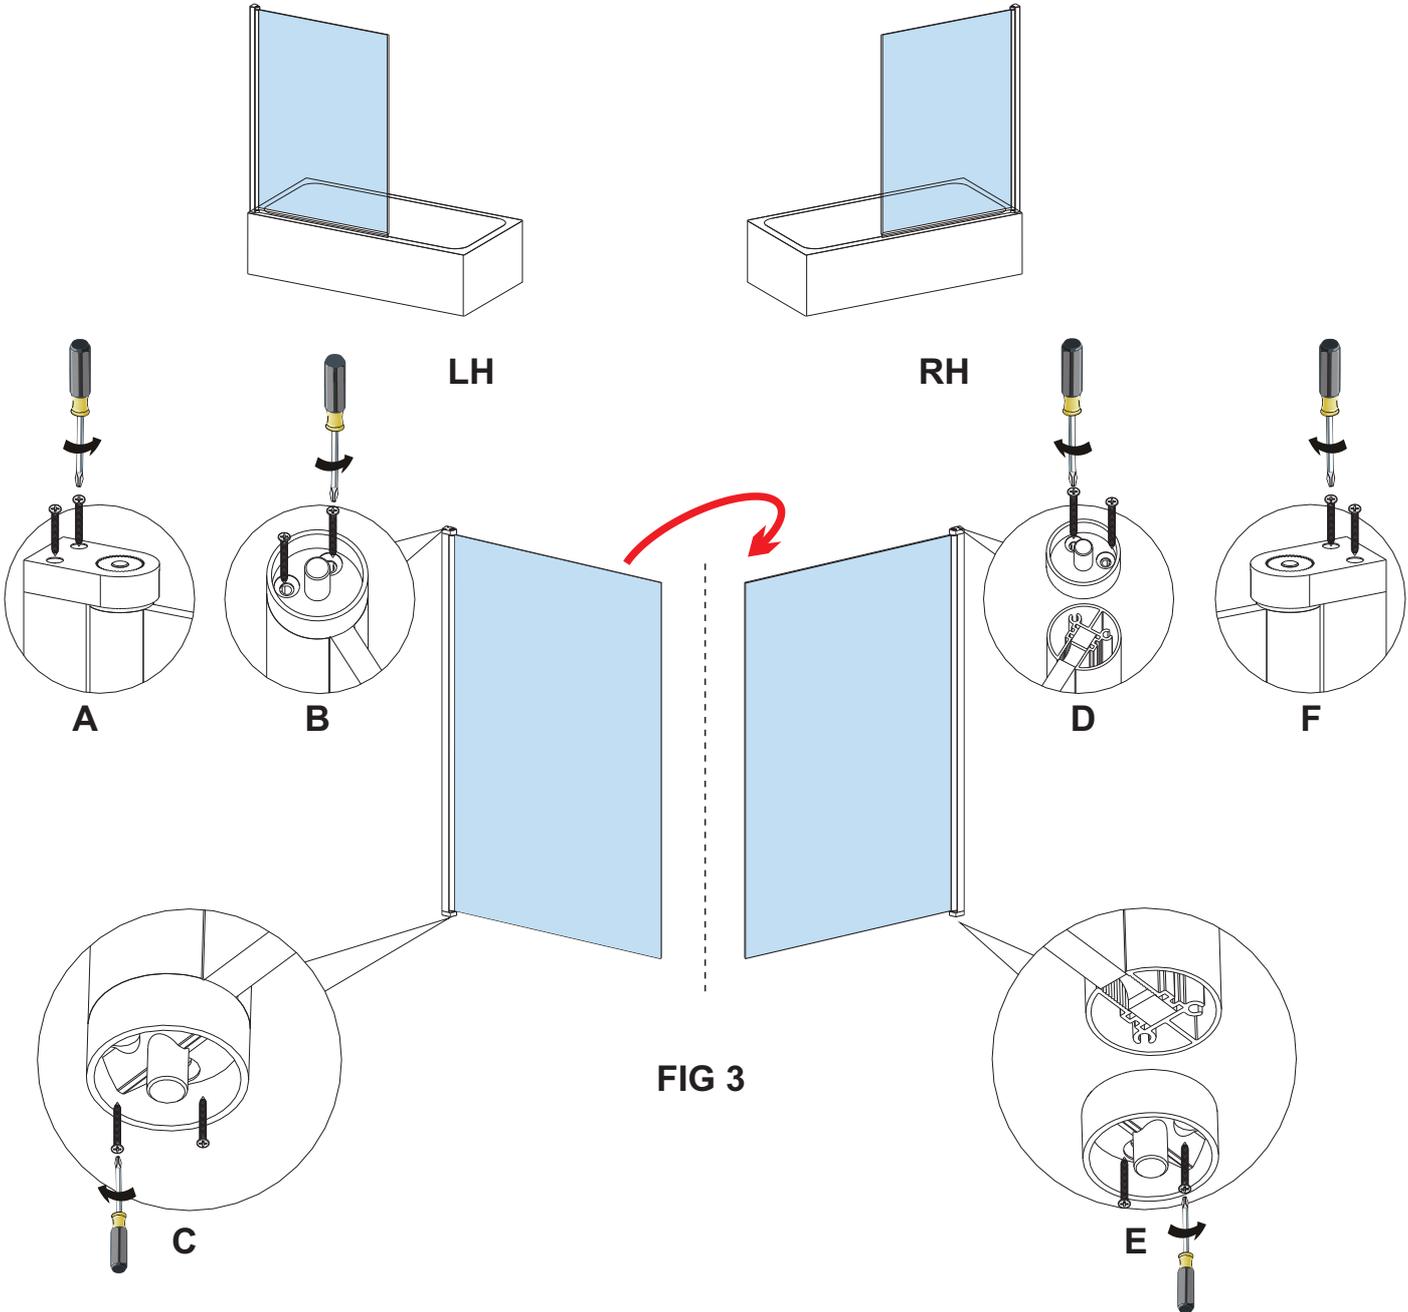


FIG 3

4. Insert the screen into the wall profile. Ensure the bottom edge of the moving panel is parallel to the top surface of the bath. Make sure open side of bracket is to the inside. **FIG 4.**

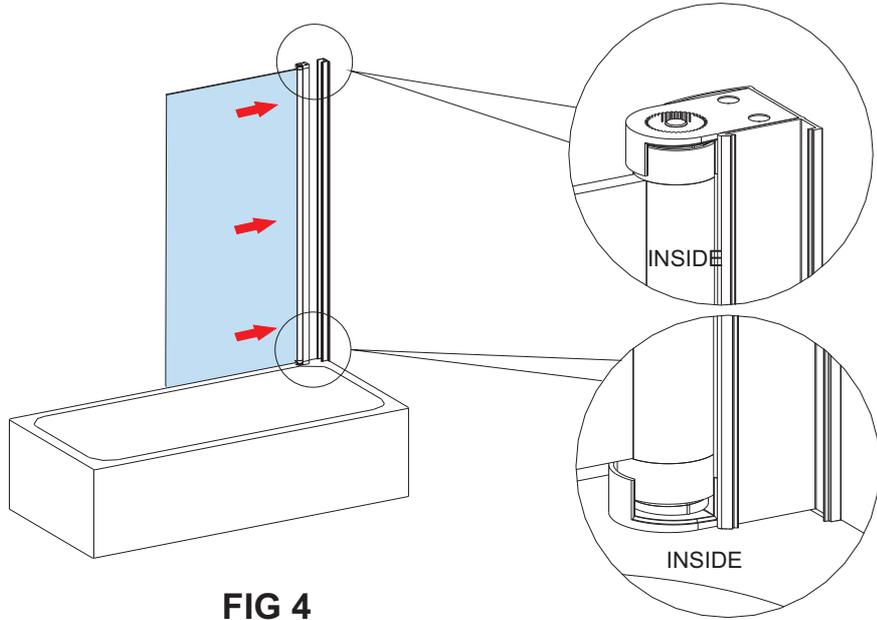


FIG 4

5. Drill 3 holes through the wall profile and fixed panel using a 3.0mm steel drill bit **SP0B08092** Using the screw, fix the screen upright profile to the wall profile in 3 places. **FIG 5.**

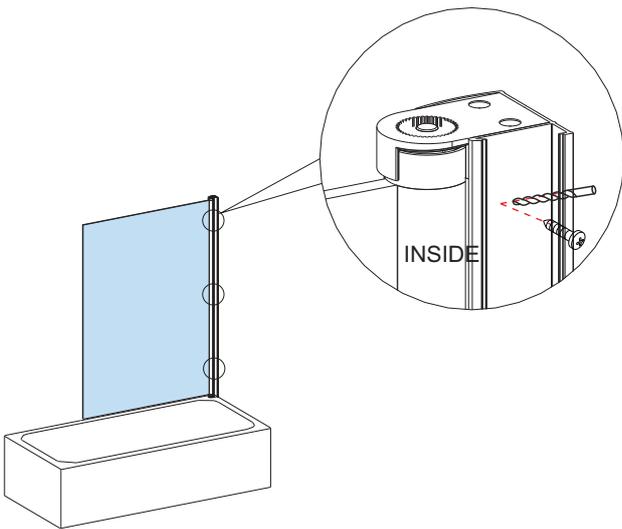


FIG 5

6. Attach the cover strip to the wall profile. Starting at the bottom firmly press cover strip into place and gradually work from bottom to top **FIG 6.**

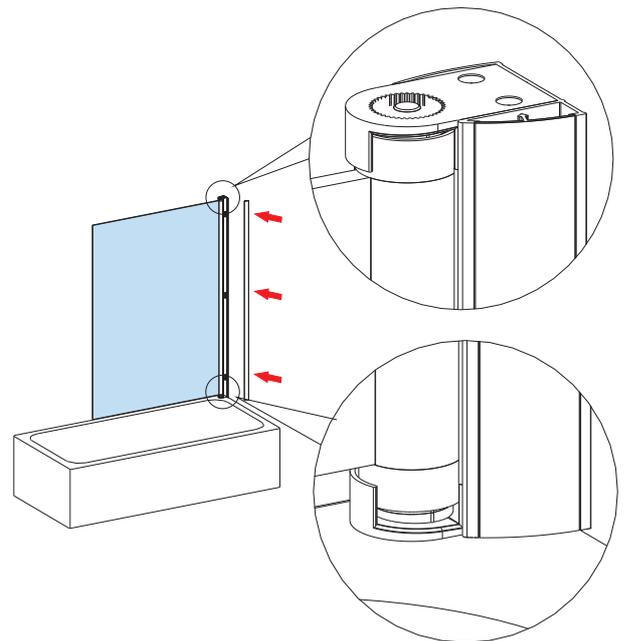


FIG 6

7. Fix top cover cap (SP0M7017) to wall profile (SP0M7013). **FIG 7.**

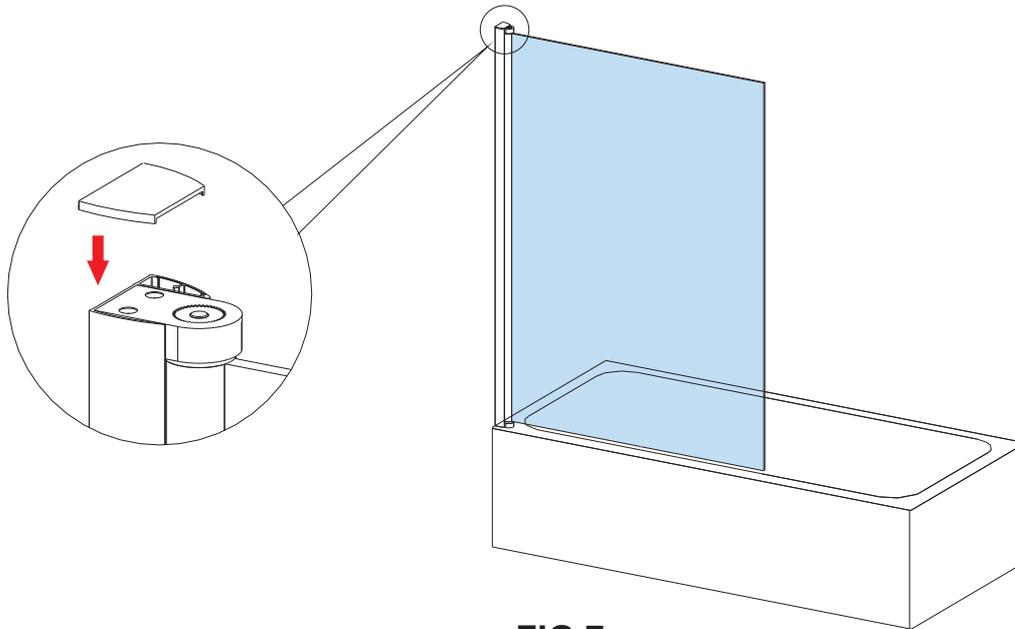


FIG 7

8. Fix the bottom seal. **FIG 8.**

IMPOTANT: Cut 2mm from the end of the bottom fin. Slide the end of the seal onto the glass and tight against the bottom bracket. Push up the rest of the seal onto the glass edge ensuring the bottom fin is in contact with the bath edge.

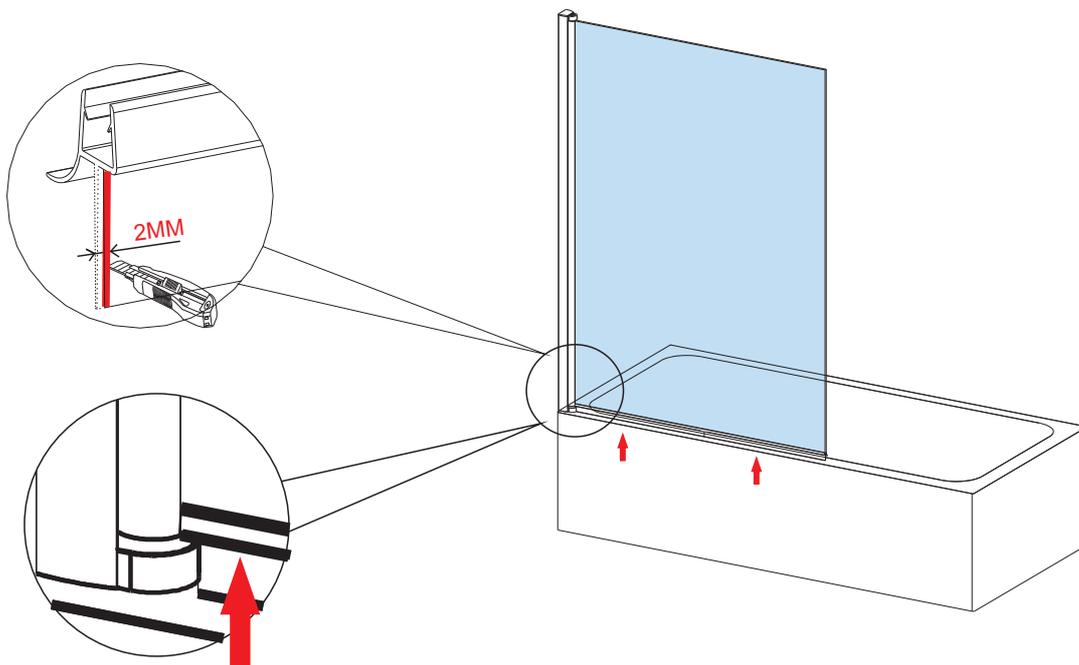


FIG 8

9. Fit handle to Moving panel

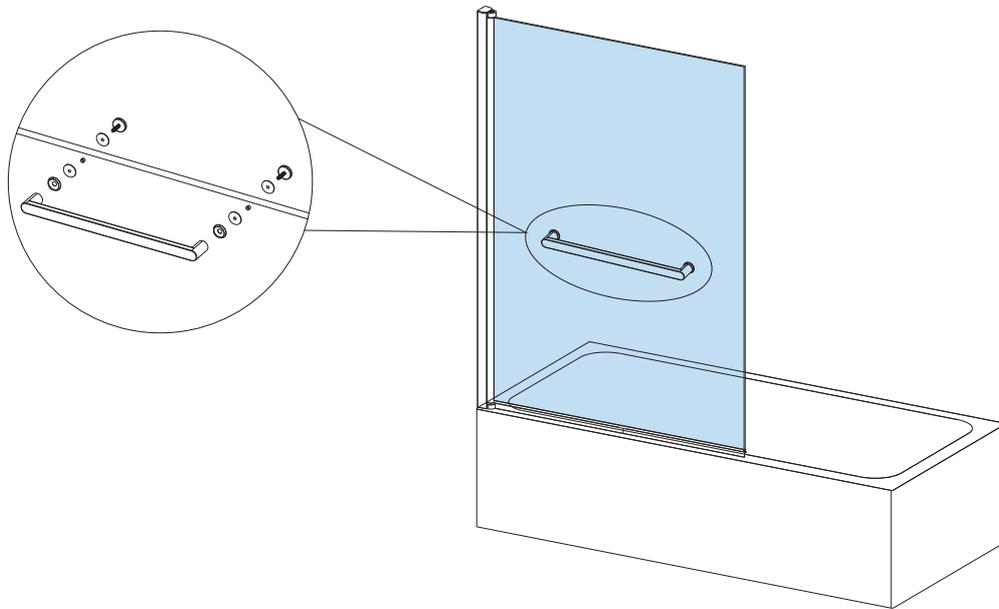


FIG 9

10. **Outside(dashed line):**

When installation is complete seal the joint between the wall profile and the wall, top to bottom on the inside only. Seal with silicon, where the wall profile and fixed panel sit on the bath.

Outside(full line)

From outside the screen, Seal along the bottom where the fixed panel, frame and wall profile meet the bath. Seal 50mm up where the frame meets the wall profile and where the wall profile meets the wall.



DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING

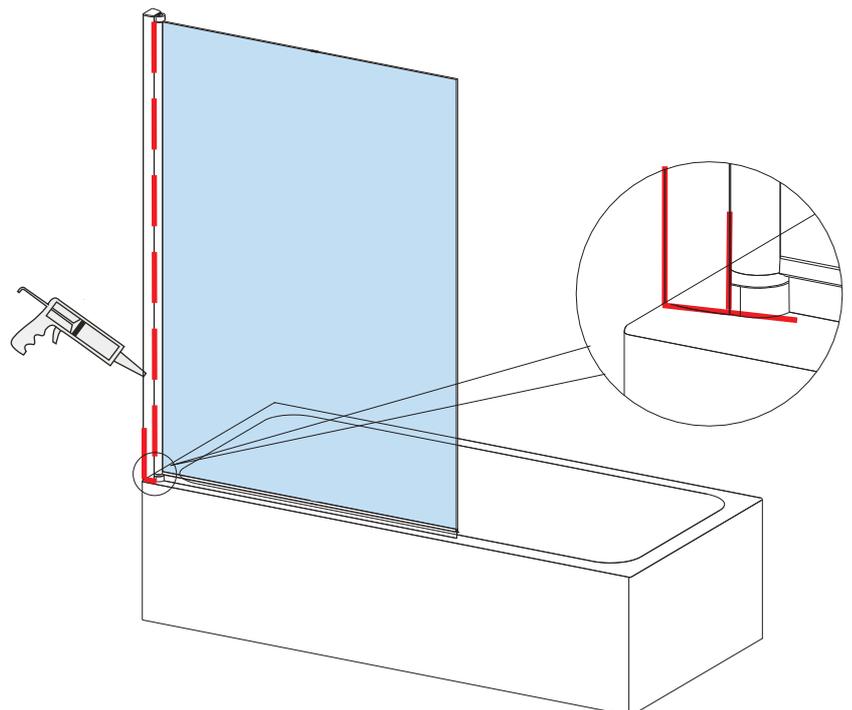


FIG 10